

## Display Type Pressure Sensors

# PSB Series

## INSTRUCTION MANUAL

TCD210187AC

**Autonics**

Thank you for choosing our Autonics product.

**Read and understand the instruction manual and manual thoroughly before using the product.**

**For your safety, read and follow the below safety considerations before using.**

**For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.**

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

### Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

**Warning** Failure to follow instructions may result in serious injury or death.

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)**

Failure to follow this instruction may result in personal injury, economic loss or fire.

- Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**

Failure to follow this instruction may result in explosion or fire.

- Install on a device panel or to a pressure port directly to use.**

Failure to follow this instruction may result in fire.

- Do not connect, repair, or inspect the unit while connected to a power source.**

Failure to follow this instruction may result in fire.

- Check 'Connections' before wiring.**

Failure to follow this instruction may result in fire.

- Do not disassemble or modify the unit.**

Failure to follow this instruction may result in fire or electric shock.

**Caution** Failure to follow instructions may result in injury or product damage.

- Use the unit within the rated specifications.**

Failure to follow this instruction may result in fire or product damage.

- Use a dry cloth to clean the unit, and do not use water or organic solvent.**

Failure to follow this instruction may result in fire.

- This product is designed to detect the pressure of noncorrosive medium. Do not use for corrosive medium.**

Failure to follow this instruction may result in product damage.

- Keep the product away from metal chip, dust, and wire residue which flow into the unit.**

Failure to follow this instruction may result in fire or product damage.

### Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, 3 sec after supplying power.
- When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive noise.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in 'Specifications')
  - Altitude max. 2,000 m
  - Pollution degree 2
  - Installation Category III

### Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

**P S B - ① ② ③ - ④**

#### ① Pressure type and Range

	Pressure	Rated range
01	Static	0.0 to 100.0 kPa
1		0 to 1,000 kPa
V01	Negative	0.0 to -101.3 kPa
C01	Compound	-100.0 to 100.0 kPa

#### ② Connection

No mark: Cable type  
C: Connector type

#### ③ Control output

No mark: NPN open collector output  
P: PNP open collector output


#### ④ Pressure port

M5: M5 standard type

### Product Components

- Product
- Unit sticker
- Instruction manual
- Connector type: Connector wiring

### Unit Descriptions

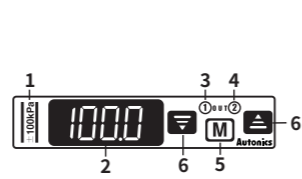

- Pressure range (sticker)**
- Display part (red)**  
Run mode: Displays PV (present value), SV (setting value)  
Setting mode: Displays parameter and setting value
- Output 1 indicator (red)**  
Turns ON when the control output 1 is ON.
- Output 2 indicator (green)**  
Turns ON when the control output 2 is ON.

#### 5. [M] key

Enters parameter group / preset setting mode, selects item and returns run mode


#### 6. [▼], [▲] key

Changes parameter / preset setting value, runs the mode or changes parameter.


### Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.

#### ■ Cable type

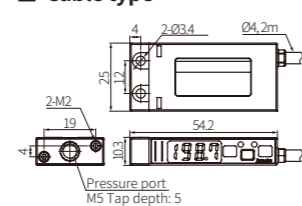


#### ■ Connector type

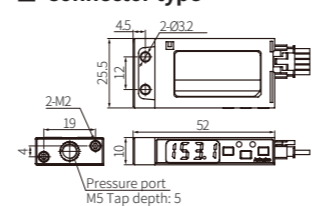


### Connections

Color	Function
Brown	+V
Blue	0V
Black	OUT 1
White	OUT 2
Orange	Analog voltage output

#### ■ NPN open collector output

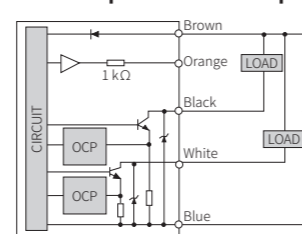

#### ■ PNP open collector output

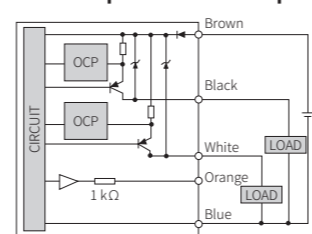


- OCP (over current protection)
- There is no short circuit protection circuit. Do not connect directly to power or capacitive loads.
- The control output is abnormal when the control output circuit is shorted or over current is supplied.
- Pay attention to the input impedance of the connected device when using analog voltage output. Be sure to the voltage drop due to the resistance of the wiring when extending the wiring.

### Installation

#### ■ One-touch fitting

- [Figure 1] Connect the metal part with a spanner so that no large force is applied to the unit body. (one-touch fitting tightening torque:  $\leq 5$  N m, hexagon wrench tightening torque:  $\leq 2$  N m, it may cause malfunction.)  
Do not use the spanner at the unit body. It may cause damage.

- [Figure 2] Depending on the usage environment, the pressure port can be removed. At this time, do not remove the O-Ring between the pressure port and the body. Pressure may leak.

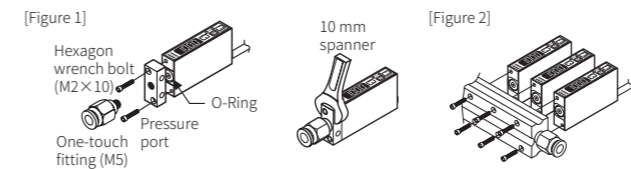

#### ■ Wiring

- Do not pull the wiring with a force of more than 30 N.

### Specifications

Model	PSB-V01□□-□	PSB-01□□□□-□	PSB-1□□□-□	PSB-C01□□□-□
Pressure type	Gauge pressure			
Applicable medium	Air, Non-corrosive gas			
Pressure	Negative	Static	Compound	
Min display interval	1-digit <sup>01)</sup>	1-digit <sup>01)</sup>	2-digit	
Rated pressure range	0.0 to -101.3 kPa	0.0 to 100.0 kPa	0 to 1,000 kPa	-100.0 to 100.0 kPa
Display & setting pressure range	5.0 to -101.3 kPa	-5.0 to 110.0 kPa	-50 to 1,100 kPa	-101.2 to 110.0 kPa
Display type	7 segment LED, 3 1/2 digit			
Display accuracy	-10 to 0 °C: $\leq \pm 2\%$ F.S., 0 to 50 °C: $\leq \pm 1\%$ F.S.			
Max. pressure	Rated pressure $\times 2$	Rated pressure $\times 2$	Rated pressure $\times 1.5$	Rated pressure $\times 2$

01) psi unit: 2-digit

Connection type	Cable type / Connector type model
Cable	• Cable type: $\varnothing 4$ mm, 5-core, 2 m • Connector type: 5-core, 3 m
Wire spec.	AWG 24 (0.08 mm, 40-core), insulator diameter: $\varnothing 1$ mm
Material	Case, Pressure port, Cover: IXEF
Guaranteed parameter write life	100,000 times
Protection structure	IP40 (IEC standard)
Certification	CE, RoHS, REACH
Unit weight (packaged)	$\approx 70$ g ( $\approx 160$ g)

Power supply	12 - 24 VDC $\pm 10\%$ (ripple P-P: $\leq 10\%$ )
Current consumption	$\leq 50$ mA
Control output	NPN open collector output / PNP open collector output model
Load voltage	$\leq 30$ VDC $\approx$
Load current	$\leq 100$ mA
Residual voltage	NPN: $\leq 1$ VDC $\approx$ , PNP: $\leq 2$ VDC $\approx$
Hysteresis	Negative / Static: 1-digit (psi unit: 2-digit) Compound: 2-digit <sup>01)</sup>
Repeat error	Negative / Static: $\pm 0.2\%$ F.S. $\pm 1$ digit Compound: $\pm 0.2\%$ F.S. $\pm 2$ digits
Response time	2.5, 5, 100, 500 ms
Protection circuit	Output short over-current protection circuit
Vibration	1.5 mm amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 2 hours
Ambient temperature	-10 to 50 °C, storage: -20 to 60 °C (no freezing or condensation)
Ambient humidity	35 to 85%RH, storage: 35 to 85%RH (no freezing or condensation)


01) Due to the pressure unit operation,  $\pm 1$  digit errors may occur in the hysteresis.

Analog output	Voltage (1 - 5 VDC $\pm 2\%$ F.S)
Output impedance	1 k $\Omega$
Linearity	$\leq \pm 2\%$ F.S
Zero-point	$\leq 1$ VDC $\approx$ $\pm 2\%$ F.S.
Span	$\leq 4$ VDC $\approx$ $\pm 2\%$ F.S.
Resolution	1/200

### Error

Display	Cause	Troubleshooting
E r 1	When external pressure is input while adjusting zero point.	Try again after removing external pressure.
E r 2	When overload is applied on control output	Remove overload.
E r 3	When 'ST1', 'ST2' setting range is not met in auto sensitivity setting mode.	Check setting conditions and set proper setting values.
H H H	When applied pressure exceeds high-limit of display pressure range.	Apply pressure within display pressure range.
L L L	When applied pressure exceeds low-limit of display pressure range.	Apply pressure within display pressure range.

### Mode Setting

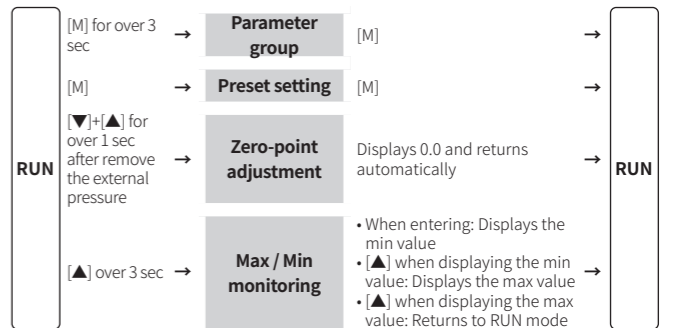

### Parameter Setting

- Some parameter are activated / deactivated depending on other parameters. Refer to the description.
- The setting item name and setting value are cross-displayed on the display part.
- It returns to RUN mode when there is no additional key input for 60 sec in each parameter group.
- Guaranteed write life: 100,000 times
- [M] key: Saves setting value and moves to next parameter
- [▼], [▲] key: Selects setting value

Parameter	Display	Default	Setting range
P-1	Display unit	Unit	PA [Negative / Compound model] Pa: kPa, KGf: kgf/cm <sup>2</sup> , bar, psi, mmH: mmHg, inH: inHg, [Static pressure model] Pa: kPa, KGf: kgf/cm <sup>2</sup> , bar, psi
P-2	OUT operation mode	OUT	F-1 F-1: Hysteresis F-2: Auto sensitivity setting F-3: Independent 2 output F-4: Independent 2 output (reverse) F-5: Independent 2 output (cross) F-6: Window comparison output
P-3	Response time	SPd	2.5 2.5, 5.0, 100, 500 ms
P-4	Voltage low limit Scale	R-1	0.0 Min. rated pressure $\leq$ Low limit Scale $\leq$ 90% of rated pressure
P-5	Voltage high limit Scale	R-5	100.0 Low limit scale setting value + 10% of rated pressure $\leq$ High limit Scale $\leq$ Max. rated pressure
P-6	Lock	HE Y	LOC LOC: Preset / Parameter setting lock PAL: Preset / Parameter / Zero-point adjustment lock UNL: Unlock

01) Multiply displayed value by 100

### Preset setting

#### ■ Setting method

- The setting item name and setting value are cross-displayed on the display part.
  - Set the operation mode in P-2 OUT operation mode
  - Enter the preset setting mode by pressing [M] key from RUN mode.
  - Select the setting item by [M] key and change the preset by [▼] or [▲] key.
  - Press [M] key to save setting or no key input over 60 sec not to save setting and return to RUN mode. (except F-2: Auto sensitivity setting mode)

#### ■ Preset setting by operation mode

Operation mode	Preset	Setting range
Hysteresis	F-1	Pressure detection level 1 5 t 1 Min. display pressure < ST1 $\leq$ Max. display pressure
	F-1	Hysteresis level 5 t 2 Min. display pressure < ST2 $\leq$ ST1
Auto sensitivity setting <sup>01)</sup>	F-2	Pressure level 1 5 t 1 Min. display pressure < ST1 $\leq$ Max. display pressure-1% of rated pressure
	F-2	Pressure level 2 5 t 2 ST1+1% of rated pressure $\leq$ ST2 $\leq$ Max. display pressure
Individual 2 output <sup>01)</sup>	F-3	Pressure detection level 1 5 t 1 Min. display pressure < ST1 $\leq$ Max. display pressure
	F-5	Pressure detection level 2 5 t 2 Min. display pressure < ST2 $\leq$ Max. display pressure
Window comparison output <sup>01)</sup>	F-6	Pressure detection low limit L o Min. display pressure $\leq$ LO $\leq$ Max. display pressure
	F-6	Pressure detection high limit H i LO $\leq$ HI $\leq$ Max. display pressure

01) Hysteresis  
Negative/Static: 1-digit (fixed) (psi Unit: 2-digit (fixed)), Compound: 2-digit (fixed)